


CHROMATIC TUNER TU300

Ultimate Guitar/Bass Tuner

Thank you for showing your confidence in us by purchasing the BEHRINGER CHROMATIC TUNER TU300. This compact guitar and bass tuner provides 7 different tuning modes. Thanks to its 7-segment LED display and 11-point LED indicators, it provides great visibility, especially in dark environments.

1. Controls

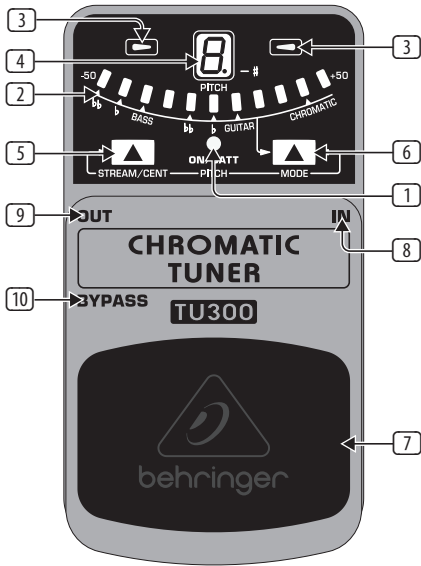

- 1 The **ON/BATT** LED illuminates when the tuner is activated. It also serves as a battery level indicator.
- 2 This LED meter indicates to what degree the instrument's tone deviates from the reference tone.
- 3 These yellow arrow LEDs light up when the played note is below or above pitch. Both LEDs will light up when the tone's pitch is correct.
- 4 The 7-segment LED display indicates the string number (high E string: "1", B string: "2" etc.) of the strummed string of your instrument, if the TU300 is operated in one of the guitar or bass modes. In chromatic mode it displays the note name. Semitones are shown by the decimal point LED ("#") in the display.
- 5 Press the **STREAM/CENT** button to switch between the LED display modes (see chapter "Operations").
- 6 Press the **MODE** button to select the tuning mode (see chapter "Operations").
- 7 Use the footswitch to activate/deactivate the tuner.
- 8 Connect your guitar or bass to the ¼" TS **IN** connector.
- 9 Connect your amp or another stompbox to the ¼" TS **OUT** connector. When the tuner is activated (footswitch pressed) the output is muted. This way, you can silently tune your guitar or bass.
- 10 The ¼" TS **BYPASS** connector always sends a signal to your amp independently of the footswitch position.

Use the **DC IN** connection at the right side of the unit to plug in a 9 V power supply (not included).

The **BATTERY COMPARTMENT** is located underneath the pedal cover. To install or replace the 9 V battery, press the hinges with a ballpen and remove the pedal cover. Be careful not to scratch the unit.

- ◆ **The TU300 is powered as soon as you insert a plug into the INPUT. The battery is “disconnected” when the plug is removed. For this reason, the TU300 has no on/off switch. To extend battery life, always disconnect the input when the unit is not in use.**

The **SERIAL NUMBER** is located at the bottom.

2. Safety Instructions

Do not use near water, or install near heat sources. Use only authorized attachments/accessories. Do not service product yourself. Contact our qualified servicing personnel for servicing or repairs, especially when power supply cord or plug is damaged.

3. Warranty

Please register your new BEHRINGER equipment right after your purchase by visiting <http://behringer.com> and read the terms and conditions of our warranty carefully.

4. Specifications

In	
Connector	¼" TS
Impedance	500 kΩ

Out	
Connector	¼" TS
Impedance	1 kΩ

Bypass	
Connector	¼" TS
Impedance	1 kΩ

Power Supply	
	9 V ⁺ , 100 mA regulated

BEHRINGER PSU-SB

USA/Canada	120 V~, 60 Hz
China/Korea	220 V~, 50 Hz
U.K./Australia	240 V~, 50 Hz
Europe	230 V~, 50 Hz
Japan	100 V~, 50 - 60 Hz

Power connector	2 mm DC jack, negative center
Battery	9 V type 6LR61
Power consumption	70 mA

Physical/Weight	
Dimensions (H x W x D)	approx. 2 ½ x 2 ¾ x 4 ½"
	approx. 54 x 70 x 123 mm
Weight	approx. 0.73 lbs / 0.33 kg

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may therefore differ from those listed or shown.

TECHNICAL SPECIFICATIONS AND APPEARANCES ARE SUBJECT TO CHANGE WITHOUT NOTICE AND ACCURACY IS NOT GUARANTEED. BEHRINGER IS PART OF THE MUSIC GROUP (MUSIC-GROUP.COM). ALL TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. MUSIC GROUP ACCEPTS NO LIABILITY FOR ANY LOSS WHICH MAY BE SUFFERED BY ANY PERSON WHO RELIES EITHER WHOLLY OR IN PART UPON ANY DESCRIPTION, PHOTOGRAPH OR STATEMENT CONTAINED HEREIN. COLORS AND SPECIFICATIONS MAY VARY FROM ACTUAL PRODUCT. MUSIC GROUP PRODUCTS ARE SOLD THROUGH AUTHORIZED FULLFILLERS AND RESELLERS ONLY. FULLFILLERS AND RESELLERS ARE NOT AGENTS OF MUSIC GROUP AND HAVE ABSOLUTELY NO AUTHORITY TO BIND MUSIC GROUP BY ANY EXPRESS OR IMPLIED UNDERTAKING OR REPRESENTATION. THIS MANUAL IS COPYRIGHTED. NO PART OF THIS MANUAL MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING AND RECORDING OF ANY KIND, FOR ANY PURPOSE, WITHOUT THE EXPRESS WRITTEN PERMISSION OF MUSIC GROUP IP LTD. ALL RIGHTS RESERVED. © 2012 MUSIC Group IP Ltd. Trident Chambers, Wickhams Cay, P.O. Box 146, Road Town, Tortola, British Virgin Islands